













RWM CONVERTIBLE HAND TRUCK ASSEMBLY INSTRUCTIONS

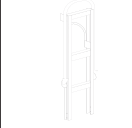

PART LIST		
REFERENCE	PART	QTY
A	 HC1 Large Convertible Frame	1
B	 Frame Reinforcements	2
C	 CA2 Nose Plate	1
D	 BRK Wheel Brackets	1 Pair
E	 A1 Axle	1
F	 10" Wheels	2
G	 5/8" Flat Washers	2
H	 3/16" x 1-7/8" Roll Pin	2
I	 1/8" x 1" Cotter Pin	2
J	 5/16" x 2-1/4" Hex Bolts	4
K	 5/16" Lock Nuts	4


STEP 1

- Remove supplied Hex Bolts (J) and Lock Nuts (K) from Frame Assembly
- Remove and discard white nylon ties from Wheel Brackets (D)
- Working from outside in, reinstall Hex Bolts (J) through Wheel Brackets (D), Frame (A), Frame Reinforcements (B) and Nose Plate (C).
- Align Wheel Brackets (D) so that the integrated bosses fit into the recesses on the outside of the Frame (A).
- The curvatures of the brackets point toward the top of the Frame (A) and the protrusion is on the same side of the frame as the blue handle.
- The Nose Plate (C) protrudes from the opposite side of the blue handle
- Reinstall the Locking Nuts (K). **DO NOT TIGHTEN.**

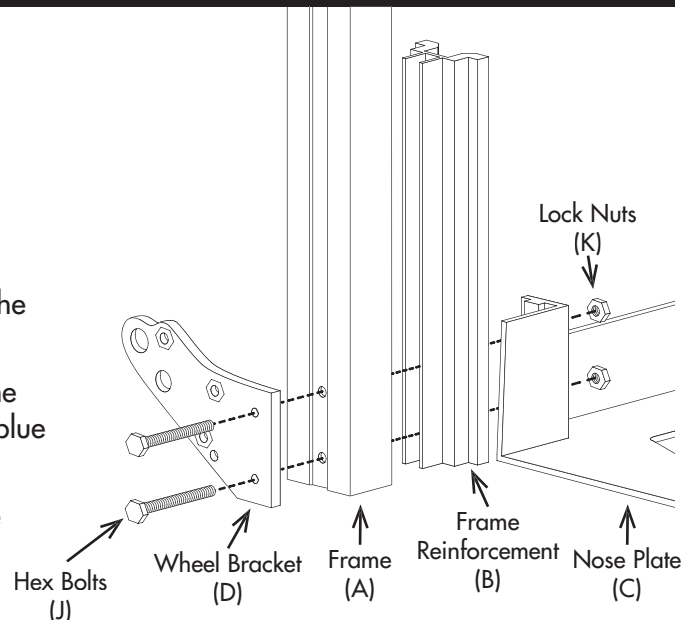


STEP 2

- Install the Axle (E) through the outermost holes of the Wheel Brackets (D).
- Install Flat Washers (G) on each end of the axle.

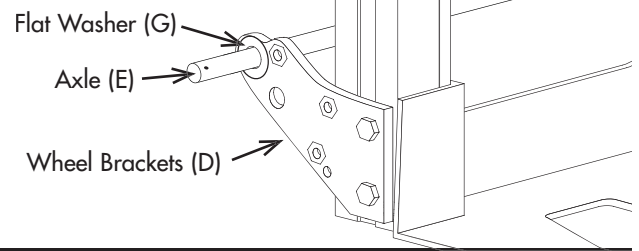


STEP 3

- Align one Axle (E) hole with the corresponding notch in the Wheel Bracket (D).
- Using a hammer, lightly drive the Roll Pin (H) into the hole until the end of the Roll Pin is nearly flush with the face of the Wheel Bracket.
- Repeat for other side.

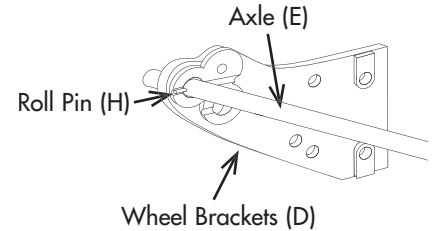


STEP 4

- Securely tighten each of the Lock Nuts (K) installed in Step 1.

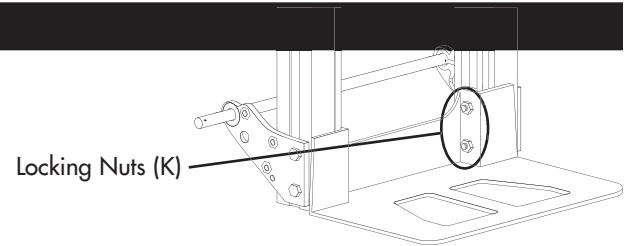


STEP 5

- Install a 10" Wheel (F) on each side of the Axle (E).

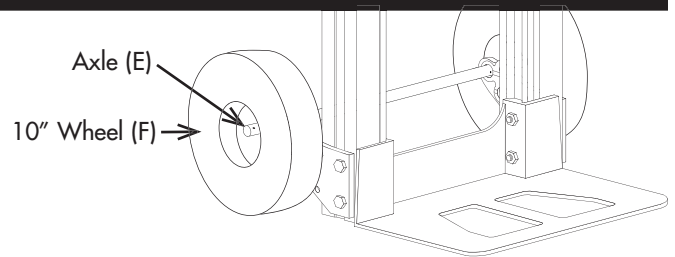

STEP 6

- Additional washers are supplied with the installation kit to compensate for the difference spacing required when alternate wheels are installed with varying hub lengths. If necessary, remove wheel and add/remove washers to adjust free play.
- Install 1 Cotter Pin (I) into each end of Axle (E) and wrap the split ends.

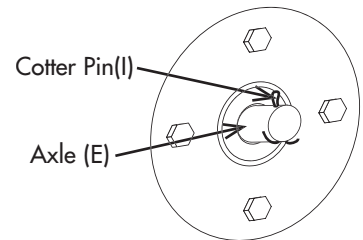

STEP 7

- Discard all unused hardware.
- Remove and discard the supplied white nylon ties from the Frame Reinforcements (B).



RWM Casters

1225 Isley Road • P.O. Box 668 • Gastonia, NC 28053
Phone 800-634-7704 • Fax 800-253-6634 • www.rwmcasters.com
Quality products on time. RWM Casters. The value added supplier.